

**1/1 BP XL**



**500494**

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

Phone: +49 5258 971-0  
Fax: +49 5258 971-120  
**Service hotline:** +49 5258 971-197  
[www.bartscher.com](http://www.bartscher.com)

Version: 1.0

Date of preparation: 2025-01-31

**Original instruction manual**



**Read these instruction manual before using the appliance and keep it available at all times!**

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance.

Read this instruction manual before you use the appliance and particularly before you start the appliance to prevent injury or damage. Incorrect use may cause damage.

All important information contained in the operating instructions must be available to the appropriate staff at all time. The operator shall be responsible for their availability.

In addition to the operating instructions, you must comply with the general, legal and other applicable regulations for occupational safety and environmental protection.

EN

## Important Indications

- The appliance is not intended to be used by persons (also children) with reduced physical, sensory or mental capabilities, and by persons with limited experience and/or limited knowledge, unless they are supervised by persons responsible for their safety or they have been instructed on the operation of the appliance.
- Children should be supervised to ensure that they are not playing with the appliance.
- Never leave the operating appliance without supervision.
- Prevent children from accessing packaging materials, for instance, plastic bags and EPS elements. **Choking hazard!**
- The appliance must be operated in correct and safe technical condition only. In case of malfunction, contact the service company or sales agent.

## Warning indications



### **WARNING!**

#### **Hot surface!**

**Overfilling of the water basin and food container may lead to spills or overflow of water and food.**

Check the level of water in the water basin and food in the food container.

#### **Hot surface!**

**The water basin, food container and lid are getting very hot during warm-keeping process.**

Do not touch hot surfaces.

Use the provided handle to open the lid.

#### **Risk of scalding with hot steam!**

**When the lid is open to take out the food, a hot steam may come out.**

Be very careful when opening the lid.

EN

## Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- Keeping the prepared food warm in a suitable GN container.

## Unintended Use

The following is an unintended use:

- food preparation
- warm or hot water preparation
- pouring and heating up flammable, harmful, and quickly evaporating liquids or materials, etc.

## Technical Data

<b>Name:</b>	<b>Chafing dish 1/1 BP XL</b>
Art. No.:	<b>500494</b>
Material:	chrome-nickel steel
Lid material:	chrome-nickel steel
Handles material:	chrome-nickel steel
Gastronorm:	1/1 GN
GN container depth, in mm:	100
Number of fuel paste can containers:	2
Volume, in L:	14
Dimensions (W x D x H), in mm:	605 x 350 x 305
Weight, in kg:	4,1

We reserve the right to implement technical modifications.

## Version / Characteristics

- Functions: warm-keeping
- Heating type: fuel paste
- With handles: yes
- Compatible with GN containers: yes
- Lid features:
  - removable, with handle
  - lid bracket at one side
- Stackable
- The set includes: 1 GN container, 1/1 GN

## List of Appliance Components



EN

Fig. 1

## Appliance Preparation

1. Unpack the appliance and remove the packaging material pursuant to environmental regulations.
2. Before the first use, thoroughly clean the Chafing-Dish pursuant to instructions in section "Cleaning".
3. Thoroughly dry all cleaned elements.

## Appliance Positioning

1. Place the appliance on clean, dry, level and sufficiently large area.
2. Maintain safe distance from flammable materials.
3. Place the appliance at least 10 cm from walls and other objects.
4. Provide for sufficient air circulation.
5. Provide for sufficient and regular airing of a room in which the appliance is operated.

## Filling with Water / Serving Food and Warm-Keeping

### NOTE!

To save time, fill the water container with hot water (approx. 70°C). Food would not get cold and would be promptly warmed. Plus, they will be kept warm throughout the entire time that is needed.

### ATTENTION!

Never use the Chafing-Dish without water in the water container! Check the water level regularly.

Do not overfill so the food container does not float and water is not spilled.

### CAUTION

The appliance may only be used to heat up already prepared food products!

Remember to keep food products warmed for a maximum of 2 hours (including preparation, storage and serving) in order to ensure food safety!

1. Place the water container on the frame.
2. Fill the water container with water.

The water level should be high enough for the food container to be immersed only slightly.

3. Next, place the GN container with warm food in the water container.
4. Place the lid on the GN container.
5. Place open fuel paste cans in the enclosed fuel paste container.

**WARNING!**

**Risk of burning/scalding!**

**The paste for warms is thick and is easily flammable.**

The fuel paste must be handled with utmost care.

6. Light the fuel paste with a suitable kindling fuel. Observe instructions of the fuel paste manufacturer.
7. After lighting the fuel paste adjust the flame with a lid of the fuel paste container.
8. Make sure that the flame in fuel paste containers is uniform.
9. Place the fuel paste container on the frame underneath the water container.

A fuel paste can is suitable to keep food warm for approx. 4 hours.

Food in the GN container is kept warm via heating water in the water container.

## Serving Food

1. In order to serve warm food from the container, open the lid carefully using the lid handle.
2. Place the lid on the lid bracket.
3. Serve warm dishes.
4. Next, close the lid again to avoid temperature loss.

### CAUTION

**Observe the appliance during warm-keeping.**

**If the fuel paste goes off, light it up again or replace the burn-out fuel paste with a new fuel paste can.**

## Procedure Following End of Use

If the Chafing-dish is not going to be used any longer, take the following steps:

- put out the fuel paste by closing the fuel paste container;
- leave the fuel paste container, water in the water container and any food left in the GN container to cool down;
- take out the cooled GN container out of the water container;
- move food to a suitable container;
- pour out the cooled water from the water container;
- clean the Chafing-Dish pursuant to instructions in section “**Cleaning**“;
- store the remaining paste in a safe place, far from ignition sources.

## Cleaning

1. Clean the appliance regularly at the end of each working day, or more frequently, if needed.
2. Clean removed components and the frame thoroughly in warm water, using a mild cleaning agent and a soft cloth or sponge.
3. Rinse cleaned components in fresh water.
4. Dry cleaned components thoroughly with a soft cloth.

## Descaling

When the appliance is used frequently, limescale may built up on the bottom of the water basin.

1. Regularly remove the limescale.
2. Use a water and vinegar solution (solution proportion is 3:1) or a special descaling agent.
3. Follow the instructions of the agent's manufacturer.