

4FLS-10



700143

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0
Fax: +49 5258 971-120
Service hotline: +49 5258 971-197
www.bartscher.com



Version: 2.0

Date of preparation: 2025-04-23

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words.....	2
1.2	Safety instructions.....	3
1.3	Intended Use	6
1.4	Unintended Use	6
2	General information	7
2.1	Liability and Warranty	7
2.2	Copyright Protection	7
2.3	Declaration of Conformity	7
3	Transport, Packaging and Storage	8
3.1	Delivery Check.....	8
3.2	Packaging	8
3.3	Storage	8
4	Technical Data.....	9
4.1	Technical Specifications	9
4.2	List of Components of the Appliance	10
4.3	Functions of the Appliance.....	10
5	Installation and operation	11
5.1	Installation.....	11
5.2	Operation	12
6	Cleaning	15
6.1	Safety Instructions for Cleaning	15
6.2	Cleaning.....	16
7	Possible Malfunctions.....	16
8	Disposal.....	18



Read these instruction manual before using the appliance and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance.

Read this instruction manual before you use the appliance and particularly before you start the appliance to prevent injury or damage. Incorrect use may cause damage.

All important information contained in the operating instructions must be available to the appropriate staff at all time. The operator shall be responsible for their availability.

In addition to the operating instructions, you must comply with the general, legal and other applicable regulations for occupational safety and environmental protection.

EN

1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.

- Do not bend, pinch nor knot the power cord.
- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Operator's responsibility

The operator is responsible for complying with the currently applicable laws, regulations, ordinances and existing national regulations on accident prevention, environmental protection, as well as the internal operation, operating and safety instructions that apply at the respective installation site.

Obligations of the operator:

- Operate the appliance and its components only in a technical condition that does not raise any objections, with functional protective and safety elements.
- Prepare risk assessment at work positions.
- Provide instruction and regular staff training. Pay special attention to and observe the section concerning safety and any safety hints.
- Provide suitable personal protective equipment (PPE)
- Observe the intervals of maintenance and cleaning.
- Document training/instructions, replacement of components.

Operating personnel

- This appliance is not intended to be used by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching the appliance on.

Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.
- Do not store any explosive materials inside the appliance, such as aerosol cans filled with propellants.

1.3 Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- Cooling wine bottles.

This appliance is intended for use in households and similar places, e.g.:

- in employee canteens in shops, offices, and similar areas;
- on farms;
- by customers in hotels, motels, and other typical accommodation establishments;
- in lodging-houses.

EN

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Cooling food products.

2 General information

2.1 Liability and Warranty

The appliance was built in accordance with the current state of the art and recognized technical safety principles. Nevertheless, during its use, there may be a threat to the health and life of the user or bystanders, or the danger of damage to the device or other assets. Warranty and liability claims for personal injury/property damage as well as defects at work are excluded if they can be attributed to one or more of the following causes:

- Use against the intended purpose
- Failure to follow/disregard the instructions and all related information
- Unauthorized structural or technical changes to the device
- Engaging insufficiently trained and insufficiently qualified personnel
- Operation with defective or incorrectly installed safety and protective devices
- Inadequate maintenance or cleaning
- Faults not fixed
- Use of prohibited media, cleaning agents, etc.
- Use of unauthorised spare parts
- Errors in operation or other misuse
- Disasters caused by foreign objects or force majeure
- Destruction of the type plate and stickers relevant for operation and safety

EN

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

EN

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Name:	Wine cooler 4FLS-10
Art. No.:	700143
Material:	plastic
Inner material:	plastic
Storage capacity, bottles:	4 - 5
Opening for bottle, (W x D) in mm:	430 x 100
Temperature range, min.– max., in °C:	5 - 18
Number of temperature zones:	1
Climate class:	SN/N
Ambient temperature, min.– max., in °C:	10 - 32
Connected load:	0,05 kW 220-240 V 50/60 Hz
Dimensions (W x D x H), in mm:	500 x 265 x 260
Weight, in kg:	7,1

EN

We reserve the right to implement technical modifications.

Version / Characteristics

- Cooling: thermoelectric
- Temperature control:
 - electronic
 - in 1°C increments
- Thermostat
- Fan
- Insulation: C-pentanes
- Lighting:
 - LED
 - switched on separately
- Digital display

4.2 List of Components of the Appliance



Fig. 1

EN

1. Openings for bottles (2 pcs)
2. Plastic pane
3. Control panel
4. Feet (4 pcs)
5. Housing
6. Ventilation openings

4.3 Functions of the Appliance

The wine cooler with LED lighting offers space for four to five bottles of wine. Champagne and Bordeaux bottles can also be chilled in the temperature zone without any problems. Ideal for 'open bars' in restaurants, bars and buffets.

5 Installation and operation

5.1 Installation

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels affixed to the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- When selecting the installation site, please consider the following items:
 - The mounting surface must be even, sufficiently load-bearing, waterproof, dry and resistant to high temperatures.
 - Make sure that the designated escape routes are clear.
 - Ensure a stable position.
 - Allow sufficient space for work, maintenance and cleaning.
 - Leave the supply and exhaust air vents, if any, free.
 - Comply with applicable technical and building regulations.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.
- The appliance should be installed at ambient temperatures below 25°C.
- The optimum ambient temperature for the appliance to reach its lowest temperature is in the range of 15–18°C.
- Do not place the appliance in direct sunlight or in the vicinity of heat sources (cooker, radiator, heating devices, etc.). Heat sources may negatively affect power consumption, and also restrict functions of the appliance.

- This appliance is intended for free-standing installation only.
- Maintain a minimum clearance of 10 cm at the rear and top, as well as 5 cm at the sides from walls and objects so as not to obstruct ventilation openings and to ensure good air circulation.

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.
- Leave the wine cooler in an upright position for approximately 2 hours before plugging it in. This will prevent faults in the cooling system due to handling during transport.
- Once the appliance has been plugged in, it should be left running for about 30 minutes to acclimatise before committing any settings.

EN

5.2 Operation

Preparation of the Appliance

1. Before use, clean the appliance, observing instructions in section 6 “Cleaning”.
2. Dry the appliance thoroughly.
3. Put pre-cooled wine bottles into suitable bottle openings in the top part of the appliance.
4. Plug the appliance into a suitable single socket.

Control Elements / Indicator Lights

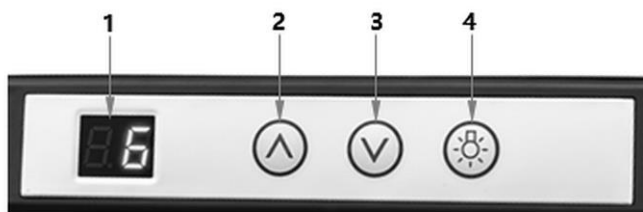


Fig. 2

1. Digital display
2. Temperature increase key
3. Temperature decrease key
4. LED lighting key

Temperature Setting

Temperature may be set the temperature in the range of 5–18°C, with 1°C increments. This temperature range is ideal for red, Bordeaux, rosé and white wines or champagne, depending on the selected temperature.

For the appliance features one temperature zone, only one temperature value may be set for all bottles 5 bottles.

1. To set the temperature, press temperature increase or decrease keys as long as the digital display shows the selected temperature.

The temperature value is displayed as long as other temperature value is set.

Actual temperature of opened wine depends on the ambient temperature. If it is too high, the wine cooler may not reach the required temperature.

Temperature Indicator

Temperature may be displayed according to the selection: in Celsius degrees or in Fahrenheit degrees.

When the appliance is connected to the electricity supply, the digital display will show the temperature in degrees Celsius.

1. To change the temperature from degrees Celsius to Fahrenheit, press the LED lighting key for 5 seconds until an acoustic signal is heard.

The temperature is now displayed in degrees Fahrenheit.

2. To have the temperature displayed in degrees Celsius again, repeat the step described above.

NOTE!

Note that the temperature display switches back to degrees Celsius when the appliance is switched off and on again.

LED Lighting

EN

The wine cooler is equipped with LED lighting, which — if necessary — may be switched on and off at any time.

1. Press the LED lighting key, to switch it on.

LED lighting makes it possible to present wine bottles through a transparent plastic pane in a buffet, at a bar or during wine tasting.

2. Press the LED lighting key again, to switch it off.

Switching Appliance OFF

1. After use, disconnect the appliance from the socket (pull the plug out).

6 Cleaning

The operator must ensure that the device and its safety components are kept in good condition. Control and safety systems should be checked for their effectiveness.

Maintenance, cleaning and repairs must only be carried out by suitably trained and specialised personnel.

If the safety devices need to be removed for maintenance, cleaning and repair, they should be reinstalled immediately after completion and their function should be checked.

All maintenance and cleaning work must be carried out in accordance with the operating instructions at the specified intervals.

6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

6.2 Cleaning

1. Wash the appliance regularly.
2. Wipe surfaces for placing bottles inside the appliance, the housing and front of the transparent plastic glass with a soft, damp cloth. Use mild cleaning agent if required.
3. Wipe the washed surfaces with a cloth moistened in clean water.
4. Finally, dry thoroughly all washed surfaces.
5. Regularly remove dust and dirt from ventilation openings of the appliance.

ATTENTION!

Soiled or obstructed ventilation openings negatively influence operation of the appliance.

7 Possible Malfunctions

The table below contains descriptions of possible causes and solutions to malfunctions or errors during operation of the appliance. The works may only be performed by suitably qualified technical personnel.

EN

When malfunction cannot be removed, contact the technical service. In such a case, provide article number, model and serial number. You will find this information on the rating plate.

Error	Possible Cause	Solution
No functions available	The plug is not properly connected to the socket	Remove the plug and insert it properly in the socket
	Electric power supply safety fuse damaged	Check the fuse, connect the appliance to another socket
	No power supply	Check the electric power supply

Possible Malfunctions

Error	Possible Cause	Solution
Wine cooler does not reach the set temperature	Direct sunlight or heat sources in immediate vicinity	Move the appliance away from heat sources
	Poor air circulation around the appliance	Maintain minimum clearance from walls and other objects
	Empty bottle compartments	Fill bottle compartments with bottles and do not leave them empty for too long
Ice forms in the wine cooler	Too high humidity in the installation site	Select an installation site with lower humidity
	Ambient temperature too low	Select installation location with ambient temperature of 10–32°C
		Switch the appliance off until the ice melts, dry and restart.

EN

Error Code Messages

Error Code	Possible Cause	Solution
ER / L0	Probe damaged	Contact the service company

8 Disposal

Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.