

9231D-GR



610856

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

Technical Support Hotline: +49 5258 971-197

www.bartscher.com



Version: 2.0

Date of preparation: 2025-06-11

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words.....	2
1.2	Safety instructions.....	3
1.3	Intended Use	8
1.4	Unintended Use	8
2	General information	9
2.1	Liability and Warranty	9
2.2	Copyright Protection	9
2.3	Declaration of Conformity	9
3	Transport, Packaging and Storage	10
3.1	Delivery Check.....	10
3.2	Packaging	10
3.3	Storage	10
4	Technical Data.....	11
4.1	Technical Specifications	11
4.2	List of Components of the Appliance	12
4.3	Functions of the Appliance.....	12
5	Installation and operation	13
5.1	Installation.....	13
5.2	Basics of Thermal Processing in Microwave.....	14
5.3	Cookware Suitable for Use in Microwave	15
5.4	Operation	16
6	Cleaning	22
6.1	Safety Instructions for Cleaning	22
6.2	Cleaning.....	22
7	Possible Malfunctions	23
8	Disposal.....	24



Read these instruction manual before using the appliance and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance.

Read this instruction manual before you use the appliance and particularly before you start the appliance to prevent injury or damage. Incorrect use may cause damage.

All important information contained in the operating instructions must be available to the appropriate staff at all time. The operator shall be responsible for their availability.

In addition to the operating instructions, you must comply with the general, legal and other applicable regulations for occupational safety and environmental protection.

EN

1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.

- Do not bend, pinch nor knot the power cord.
- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Flammable Materials

- Never subject the appliance to contact with high temperature sources, e.g.: oven, furnace, open flame, heat generating devices, etc.
- To avoid fire hazard, clean the appliance regularly.
- Do not cover the appliance with, e.g., aluminium foil or cloths.
- Use the appliance only with materials designated to this end and with correct temperature settings. Materials, groceries and left-overs remaining in the appliance may catch fire.
- Never use the appliance near flammable or inflammable materials, e.g.: petrol, spirit, alcohol, etc. High temperature triggers evaporation of these materials, and, as a result of contact with sources of ignition, an explosion may occur.
- In case of fire, disconnect the appliance from the power supply before attempting suitable fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.

EN

Fire or Explosion Hazard

- Do not place any objects inside the appliance (cookbooks, sponges, etc.). Sudden activation of the appliance can cause damage to such objects, and even burn them.
- When heating or cooking food products in containers from flammable materials such as plastic or paper, remain near the appliance as there is a risk of the appliance overheating.
- If objects in the device catch fire, leave the door closed, turn the appliance off and remove the plug from its socket or R flip the main circuit breaker switch.
- Do not use metallic pots, pans or covers. Metal may lead to sparks in the cooking chamber. Use only dishes resistant to high temperatures, designed for use in microwave ovens (see sec. 5.3). Risk of fire!
- Do not prepare food products and beverages in closed or sealed containers. Such containers may crack inside the device or injure the user when being opened!

Safety

- Do not use the appliance for preparation of fresh or hard-boiled eggs, either in shell or peeled, as eggs may explode.
- Food products with thick skins, such as potatoes, pumpkins, apples or chestnuts, should be pierced prior to heating.
- Do not place solutions inside containing water, oil or grease, as such a mixture may explode.

Safety of Microwave Oven Operation

- Do not fry any food products in the appliance. Hot oil can lead to skin burns and/or damage to the appliance.
- Food products prepared in the appliance are heated unevenly. Also, containers are usually hotter than the food products inside. Carefully check the temperature of food products, especially those prepared for children. Risk of burns!
- During the heating of liquids in the microwave oven it is possible that the liquid may reach boiling temperature without externally visible bubbling. For this reason, special care must be taken when handling the container. Even a light bump, e.g. when removing the liquid from the device, may lead to spillage. Risk of burns!
- For that reason avoid using tall, narrow containers with a thin neck.
- Place a spoon (only in exceptional cases use a metallic one) or glass stirrer in the beverage, then place the dish in the center of the rotating tray. Stir the liquid prior to heating and after half the heating time has elapsed. After heating: wait for a moment, carefully stir the liquid, then remove from the cooking chamber.
- As food prepared in the microwave is heated unevenly, the contents of children's bottles must be mixed thoroughly - optimally by shaking – then, before giving the bottle to the child, check the temperature of the food. **Prior to heating food remove the bottle cap and nipple!**

Microwave Radiation Hazard!

Exposure to microwave radiation may cause bodily injury. To avoid the effects of this risk, follow the safety instructions presented below:

- Do not turn the microwave oven on when the door is open, as the appliance may emit an excess of damaging electromagnetic waves.
- Never change the safety locks!
- It is extremely important to not damage the door and that it can be closed properly. Example of damage to the door which may be unsafe include the following:
 - warping and indentations,
 - cracked and/or properly secured hinges and screws,
 - damaged door seals,
 - cracked glass pane,
 - damaged locking elements.
- The space between the door and the appliance must be free of foreign objects.
- Door seals must be tight and clean, as dirt and damage may allow electromagnetic waves to escape from the microwave oven. Take care to prevent buildup of any residues (e.g. cleaning agents, dust, grease, etc.).

EN

Operator's responsibility

The operator is responsible for complying with the currently applicable laws, regulations, ordinances and existing national regulations on accident prevention, environmental protection, as well as the internal operation, operating and safety instructions that apply at the respective installation site.

Obligations of the operator:

- Operate the appliance and its components only in a technical condition that does not raise any objections, with functional protective and safety elements.
- Prepare risk assessment at work positions.
- Provide instruction and regular staff training. Pay special attention to and observe the section concerning safety and any safety hints.
- Provide suitable personal protective equipment (PPE)
- Observe the intervals of maintenance and cleaning.
- Document training/instructions, replacement of components.

Safety

Operating personnel

- The appliance can be used by children of 8 years old and older, as well as by people with reduced physical, sensory or mental abilities and those with limited experience/knowledge as long as they are under supervision or have been instructed on safe use of the appliance and possible risks. Children should not play with the appliance.
- Do not leave the appliance unattended in the presence of children.

Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.

1.3 Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- preparing, heating-up, grilling and defrosting foods with the use of suitable cookware.

This appliance is intended for use in households and similar places, e.g.:

- in employee canteens in shops, offices, and similar areas;
- on farms;
- by customers in hotels, motels, and other typical accommodation establishments;
- in lodging-houses.

EN

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- for industrial and laboratory needs,
- as a storage compartment (e.g., for cookware/dishes),
- drying paper, textiles or other flammable materials,
- heating/heating up flammable, harmful, and quickly evaporating liquids or materials, etc.

2 General information

2.1 Liability and Warranty

The appliance was built in accordance with the current state of the art and recognized technical safety principles. Nevertheless, during its use, there may be a threat to the health and life of the user or bystanders, or the danger of damage to the device or other assets. Warranty and liability claims for personal injury/property damage as well as defects at work are excluded if they can be attributed to one or more of the following causes:

- Use against the intended purpose
- Failure to follow/disregard the instructions and all related information
- Unauthorized structural or technical changes to the device
- Engaging insufficiently trained and insufficiently qualified personnel
- Operation with defective or incorrectly installed safety and protective devices
- Inadequate maintenance or cleaning
- Faults not fixed
- Use of prohibited media, cleaning agents, etc.
- Use of unauthorised spare parts
- Errors in operation or other misuse
- Disasters caused by foreign objects or force majeure
- Destruction of the type plate and stickers relevant for operation and safety

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint.

Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

EN

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Name:	Microwave 9231D-GR
Article number:	610856
Material:	stainless steel steel, painted
Thermal processing chamber material:	stainless steel
Rotary plate material:	glass
Diameter of rotary plate, in mm:	270
Microwave output, in W:	900
Grill output, in W:	1000
Number of magnetrons:	1
Number of power output levels:	9
Volume, in l:	23
Chamber dimensions (W x D x H), in mm:	315 x 312 x 198
Time setting, up to, in min.:	30
Energy consumption in standby mode, in W:	0,66
Max. time until switching to standby mode, in minutes:	0
Connected load:	1,4 kW 230 V 50 Hz
Dimensions (W x D x H), in mm:	480 x 405 x 280
Weight, in kg:	12,8


EN

We reserve the right to implement technical modifications.

Version / Characteristics

- Functions: heating-up, defrosting, grill (may be combined)
- Control: electronic, knob
- Timer
- Rotary plate
- Internal lighting
- The set includes: 1 grill grate, Ø189 mm, H 79 mm

4.2 List of Components of the Appliance

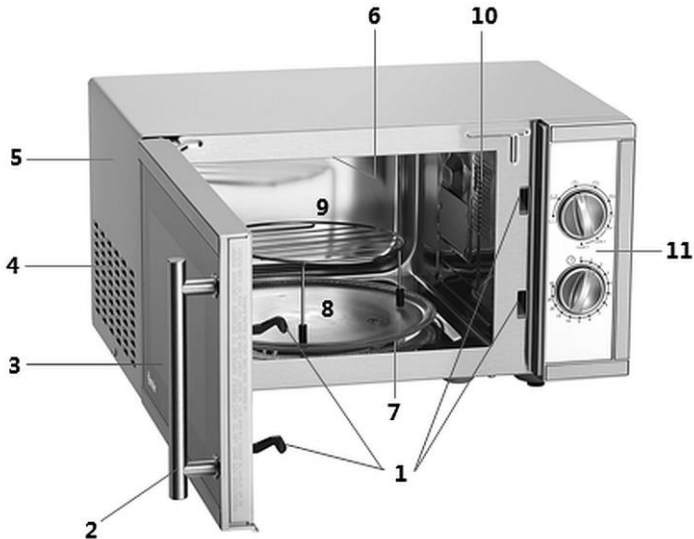

EN

Fig. 1

- | | |
|----------------------------|-------------------------|
| 1. Door safety lock system | 2. Door handle |
| 3. Door with sight glass | 4. Ventilation openings |
| 5. Housing | 6. Grill heater |
| 7. Roller ring | 8. Rotary plate |
| 9. Grill grate | 10. Internal lighting |
| 11. Control panel | |

4.3 Functions of the Appliance

The microwave is designed for heating-up, defrosting and grilling foods with the use of cookware suitable for use in microwave. With the use of suitable rotary controllers you may set output and time, as required for a given dish.

5 Installation and operation

5.1 Installation

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels affixed to the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- When selecting the installation site, please consider the following items:
 - The mounting surface must be even, sufficiently load-bearing, waterproof, dry and resistant to high temperatures.
 - Make sure that the designated escape routes are clear.
 - Ensure a stable position.
 - Allow sufficient space for work, maintenance and cleaning.
 - Leave the supply and exhaust air vents, if any, free.
 - Comply with applicable technical and building regulations.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.
- To ensure proper functioning, the device must have sufficient ventilation.
- Never block the ventilation ducts!
- It is necessary to maintain the following safe distances:
 - above the device: 20 cm
 - at rear of device: 10 cm
 - at sides of device: 5 cm.

- The device must remain a minimum distance of 2 m from radios, televisions, and other such electronics in order to avoid interference with the signal reception.

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.

5.2 Basics of Thermal Processing in Microwave

Instead of traditional heat sources, a microwave oven applies an electron lamp which emits electromagnetic waves. These waves, like radio waves, are invisible but their effects can be observed. Such waves can pass through materials such as glass, porcelain, artificial materials and paper. As these materials do not contain water, grease or oil, they are not heated by the microwaves. Simply put, the microwaves directly reach the food product, causing molecules of water, grease and oil to vibrate; friction results in the creation of heat which is used for defrosting, heating or cooking. During cooking with microwaves, heat remains inside the product being prepared, in opposition to the processes of boiling or grilling in which heat enters the food from the outside. If the device is not damaged, energy created by the microwaves remains inside the device and does not pose a threat to the user.

EN

- Carefully place food products to be cooked inside the microwave oven, with larger pieces at the outer edges.
- Remember the cooking time. It is best to at first set the shortest possible time and then lengthen cooking time as necessary. Excessive cooking time may cause the food product to smoke or catch fire.
- Cover food products during cooking. This will ensure even cooking and prevent splattering.
- Turn food products over while cooking. This will speed up the process of cooking such products as chicken or hamburgers. Large products, such as a roast, should be turned over at least once.
- Such dishes as dumplings should, after half of the cooking time has elapsed, be turned over, moved from the top to bottom, moved from the outside to the inside, etc.

5.3 Cookware Suitable for Use in Microwave

- Check that a dish is suitable to be used in a microwave.

Test: place the empty dish together with a glass of water (never activate the device when empty or with only an empty container inside), then heat at the highest power level for 60 seconds. An appropriate dish will be lukewarm. If the dish is hot, it is not appropriate for use in the microwave.

Proper materials for dishes for the microwave allow microwaves to pass through. Energy goes through the container and heats the food product.

- Do not use metallic containers or containers containing metallic parts (e.g. gold strips around the edge of a plate). Microwaves do not pass through metal.
- Do not use products from recycled materials, as they may contain small pieces of metal. If such containers are used, sparks and even fire may result.
- Dishes of oval and round shapes should be used, as food products cook more quickly in the corners of square-shaped containers.
- Wide, flat containers are best suited to use in the microwave as compared to narrow and tall ones. Food products cook evenly in flat dishes.
- To avoid food from baking onto the edge of dishes, you may cover the edges with thin strips of aluminum foil. Do not use too much aluminum foil, and leave a minimum distance of 2.5 to 3.0 cm between the foil and walls of the microwave cooking chamber.

The below table will be helpful in selecting suitable cookware:

Cookware piece	Microwave unit mode	Grill mode	Combined mode
Heat resistant glass	yes	yes	yes
High temperature non-resistant glass	no	no	no
Heat resistant ceramics	yes	yes	yes
Plastic cookware suitable for microwave units	yes	no	no
Kitchen paper	yes	no	no
Metal tray / metal bowl	no	yes	no
Metal grate	no	yes	no
Aluminium film & film container	no	yes	no

5.4 Operation

EN

Before Use

1. Remove accessories from the appliance chamber.
2. Prior to first operation, clean the appliance and its equipment according to instructions in section **6 'Cleaning'**.
3. Leave the door open for the chamber to dry completely.

Inserting Rotary Plate

1. Insert the roller ring (7) in the groove in the bottom of the thermal processing chamber.
2. Put the rotary plate (8) at the bottom of the chamber with the ribbed side down and rotate it until it engages with the rotary plate drive (a).


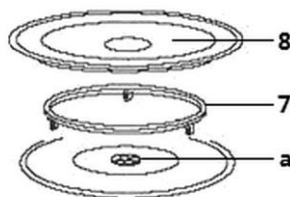


Fig. 2

Control Panel

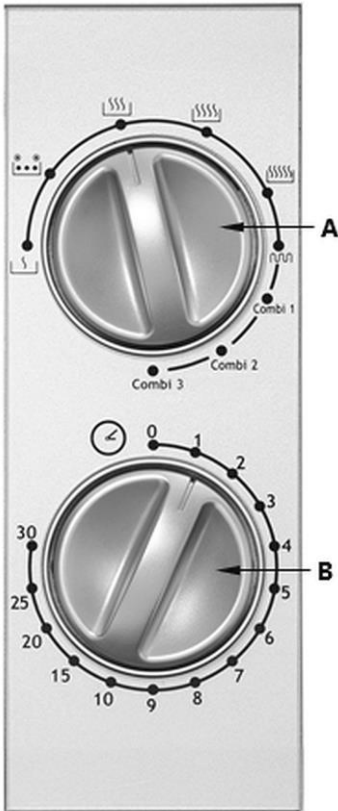

A – Function selector knob

a) Microwave unit functions

Output levels		Output
	Low	18%
	Defrosting	36%
	Medium	58%
	Medium high	81%
	High	100%

b) – Grill function

c) Combined functions:

- Combi 1
- Combi 2
- Combi 3

B – Timer knob (0–30 min.)

Heating up Food



WARNING!

Risk of burns by hot cookware!

Cookware may be very hot, as high temperature from food is being radiated.

Remove cookware using only oven mitts or kitchen dish-cloth.



CAUTION!

Risk of incineration!

Observe the appliance especially with high output levels.

Reduce the output in the case of abnormal noises, pouring or bubbling of liquids.

1. Before each use, check if the rotary plate and roller ring are correctly set.

EN

The thermal processing chamber must be clean; the roller ring must lie in the groove; the rotary plate must be snapped onto the drive of the rotary plate.

NOTE:

Never use the appliance without the rotary plate and without a container with food nor without food in a container!

Nothing may protrude outside of the rotary plate edge.

Do not heat up food directly on the rotary plate.

When heating up a number of chunks / pieces, distribute them evenly in a cookware / container, so that they do not touch each other.

2. Place a container with food on the rotary plate.
3. Close the appliance door.
4. Make sure that door seals are free of foreign objects and that the door closes securely.

Installation and operation

- Using the right controller, set the required output level and thermal processing duration (1–30).

The thermal processing duration depends on the following food characteristics:

initial temperature:	the lower, the longer the thermal processing duration
density:	the higher, the longer the thermal processing duration
humidity:	the lower, the longer the thermal processing duration
thickness:	the larger, the longer the thermal processing duration
weight:	the larger, the longer the thermal processing duration

NOTE!

As soon as the thermal processing time is set, the appliance starts to operate!

EN

The thermal processing chamber is lit, and the rotary plate is rotating.

- Make sure that the rotary plate is always free to rotate.
- Open the door in order to stop the appliance during operation.
- When food is removed before the set time elapses or when the appliance is not in operation, always set the timer to '0'.

An acoustic signal is heard when the set time elapses.

- Use the door handle to open the door and remove food.

Grill Function

The appliance is equipped with the grill function. The grill function is particularly recommended for thin slices of meat, steaks, chops, meat sliced in narrow lanes and sausages. Moreover, the function is also suitable for hot sandwiches and au gratin dishes.

To use this appliance function:

- place the enclosed grill grate on the rotary plate,
- place food on the grill grate,
- place a suitable container on the rotary plate for collecting roast sauce or liquid from processed food,

- close the appliance door,
- rotate the function control knob to the right, to set the grill function and prepare food.

Combined Functions

It is possible to combine in the appliance the function of microwave unit and grill for the purpose of defrosting, cooking, heating up and au gratin processing. Owing to this, some food obtain particular crispiness.

There are three possibilities to use combined functions:

Combi 1

Combi 2

Combi 3


In the case of combined programs, the microwave function operates interchangeably with the grill function. The percentage share of these functions is as follows and is factory default programmed:

Program	Microwave unit operation	Grill operation	Suitable food
Combi 1	(30%)	(70%)	Fish, au gratin dishes, potatoes
Combi 2	(49%)	(51%)	Puddings, omelettes, roast potatoes
Combi 3	(67%)	(33%)	Poultry

EN

1. Select program and total duration.
2. Prepare food with the use of the selected program.

Defrosting

The function labeled  (DEFROST) allows the easy defrosting of frozen food products. Energy created by the microwaves heats the external layer of the product, and the heat slowly seeps into the interior of the product. This ensures even defrosting of the food product.

1. Prior to defrosting, remove the packaging from the product.
2. Place the product on a plate.

While defrosting proceed in accordance with the following instruction:

Installation and operation

Covering

Food products should be covered, in order to:

- quicken their heating,
- avoid drying out,
- avoid splattering of grease in the cooking chamber,

Exceptions: bread, baked goods, breaded food products and products which are supposed to be crunchy should not be covered.

Turning over / mixing

Practically all food products should be turned over and/or mixed at least once during defrosting.

1. Sticky pieces of food should be separated as quickly as is possible.

Smaller portions

Smaller portions defrost more evenly and quicker than larger ones.

1. Divide food products into smaller pieces prior to defrosting.

An entire meal can thus be quickly and easily prepared.

EN

Delicate foods

Delicate foods such as pate / cakes, cream, cheese or bread should be only partially defrosted, and the defrosting process should be finished at room temperature. In this manner you will avoid a situation where the food is too hot on the outside while still frozen on the inside.

Leaving dishes out

The time for leaving dishes out following defrosting is very important, as it guarantees continuation of the defrosting process. After defrosting, the defrosted food product should be cooked as soon as possible. Do not re-freeze defrosted food products.

6 Cleaning

The operator must ensure that the device and its safety components are kept in good condition. Control and safety systems should be checked for their effectiveness.

Maintenance, cleaning and repairs must only be carried out by suitably trained and specialised personnel.

If the safety devices need to be removed for maintenance, cleaning and repair, they should be reinstalled immediately after completion and their function should be checked.

All maintenance and cleaning work must be carried out in accordance with the operating instructions at the specified intervals.

6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

EN

6.2 Cleaning

1. Clean the appliance regularly after the end of each working day, or more frequently if needed.
2. Thoroughly remove all food left-overs and beverage remains from internal walls with a soft and damp cloth. With extensive soiling you may also use a mild cleaning agent.
3. Clean external surfaces with a soft, damp cloth.

NOTE!

To protect elements inside the appliance against damages, do not allow water to enter the appliance through ventilation openings.

4. Wipe the door, door seals and neighbouring elements gently with a damp cloth.

Possible Malfunctions

5. Clean the control panel with a soft, damp cloth only. Leave the appliance door open to avoid accidental switching on.
6. Regularly clean the roller ring, rotary plate and grill grate with warm water and a mild cleaning agent, or in a dish-washer.
7. If condensed water is collecting on the inside and outside of the door, remove the humidity with a soft cloth.

NOTE:

Condensed water is collecting when the appliance is used in conditions of high air humidity. The phenomenon of water condensing is normal.

8. To remove odours from inside of the appliance, place a container suitable for use with microwave units filled with a cup of water, and one lemon juice and peel in the microwave unit for approx. 5 minutes.
9. Thoroughly dry the appliance and equipment with a dry, soft cloth.

7 Possible Malfunctions

If the microwave does not work:

1. Check if the appliance is correctly connected to the power supply. Remove the plug from the socket and wait for approx. 10 minutes before re-connecting it correctly.
2. Check if a fuse has not been tripped or if the main switch is not switched off. If they operate correctly, check the connection with another appliance.
3. Check if door is locked correctly (door safety lock system). Otherwise, due to safety reasons, microwaves are not generated in the thermal processing chamber.

NOTE:

If all the errors listed above may be excluded, have a qualified specialist or a re-seller immediately check the appliance and repair it should it be necessary.

8 Disposal

Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.